


1 Installation

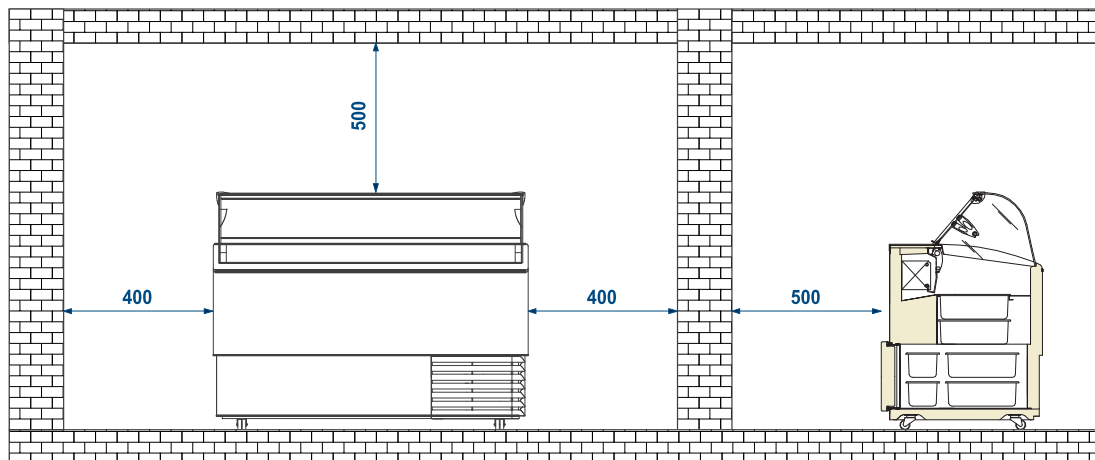

Attention

It is essential that you follow the distances indicated (mm) in order to correctly install the equipment.




2 Positioning



Warning

The cabinet is equipped with pivoting whells for an easier handling. It's absolutely necessary to stabilize after placement the equipment to the floor.

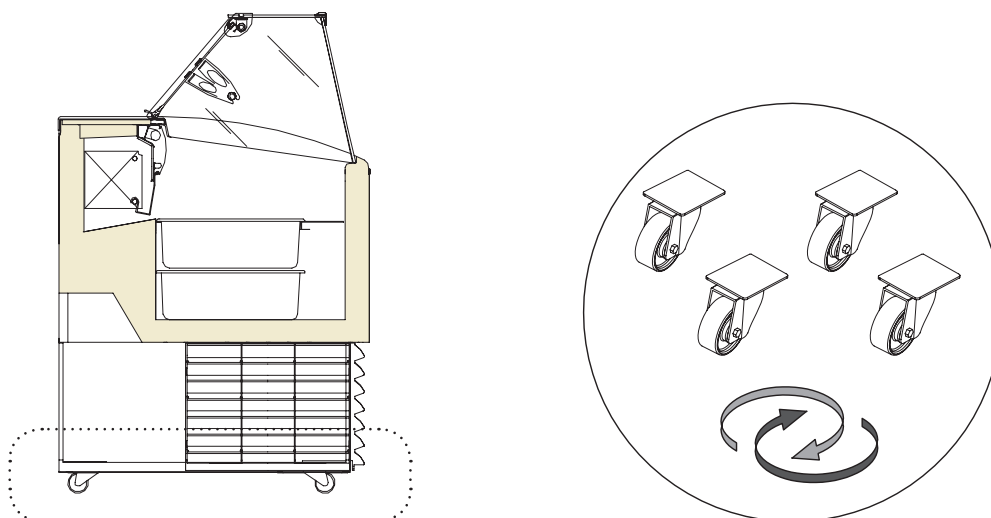

3 Load limits



Attention

It is essential **not to exceed** the load limits indicated in order not to alter proper air circulation and to thereby avoid the product from overheating.

